


Palmair® Louvre Installation Instructions

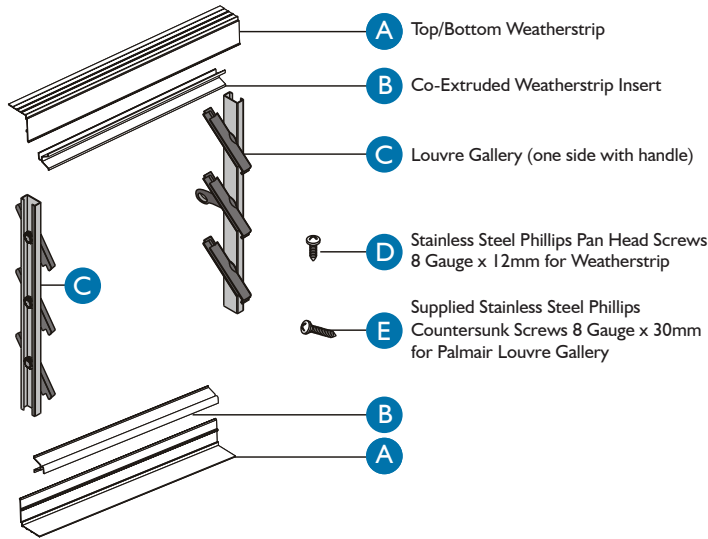

IMPORTANT

Required Blade Width = $F - 48\text{mm}$

SAFETY GLASS MAY BE REQUIRED BY LOCAL AUTHORITIES.

1

1. Ensure the frame is true and plumb **H**
 2. Cut **A** Weatherstrips to width of frame = f
 3. Drill holes and countersink as shown

f = Width of window opening
b = 40mm Maximum
c = 200mm Typical spacing between holes

2

NOTE: Apply sealant to the whole length.

3

NOTE: Do not over tighten the screws.
NOTE: **A** Bottom Weatherstrip orientation.

4

IMPORTANT! Ensure the Frame and Gallery **C** are true and plumb.
IMPORTANT! Leave 2.5mm space at top for **A** top Weatherstrip.

NOTE: Orientation of Louvres

5

1. Ensure the Frame and the **A** top Weatherstrip are true and plumb **H**

2. Fix **A** top Weatherstrip by repeating steps 2 and 3

6

1. Cut (both) **B** Weatherstrip inserts to length
 2. Fit insert to head

P = Distance between Galleries